

CAFE CURTAINS MEASURING GUIDE

The measurements we need are the same whether you choose a classic pocket top or pleated cafe curtain.


We recommend mounting your pole in the middle of the vertical flat sections of the frame either side of the window, in line with the sash join/window bar.

Width

- Simply provide us with the width of the pole (A-B).
- As your curtain will always have some gather, absolute accuracy is not essential.

Drop

- Using the points (A&B), measure down to the sill (C&D) then subtract 1cm.
- Check both sides (A-C & B-D). If they're different, take an average of the two.

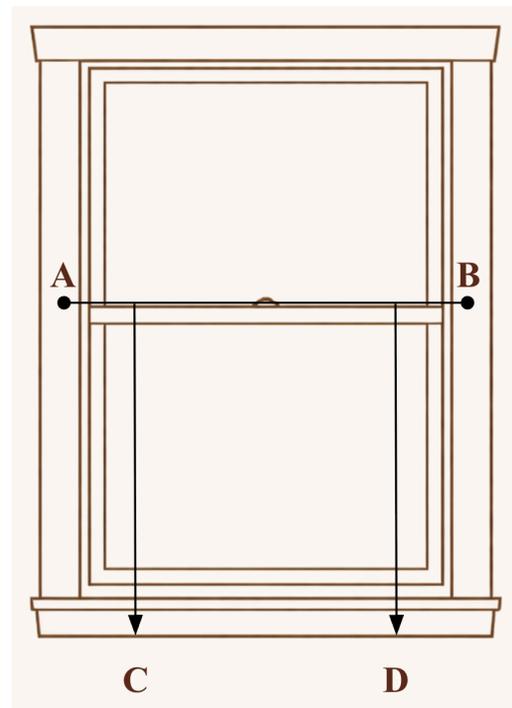

When measuring for a bay window, or a triple window, each window should be treated individually. Order in the same way as if the windows were completely separate.

If you're unsure how to measure, please send us an email at info@drapes.studio